



# Cross Section for Leach Bed

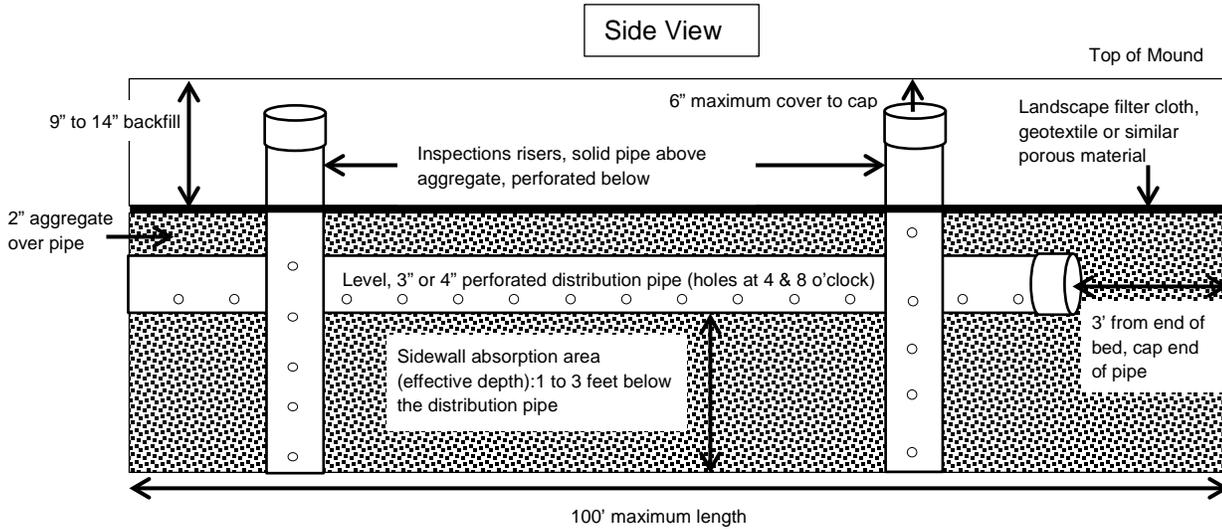


## Example Calculation

To calculate the divisor per linear foot of bed, add both sides of the sidewall absorption area (effective depth) plus the bottom absorption area (width). In the example below, the effective depth is 3' and the width is 12'. The divisor would be 18 ( $3 + 3 + 12$ ). 18 is the maximum allowable divisor.

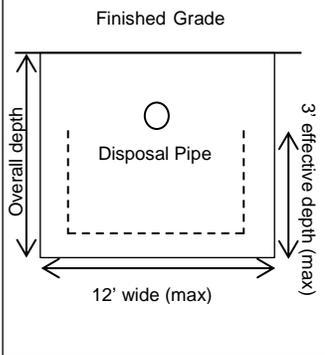

## Top View

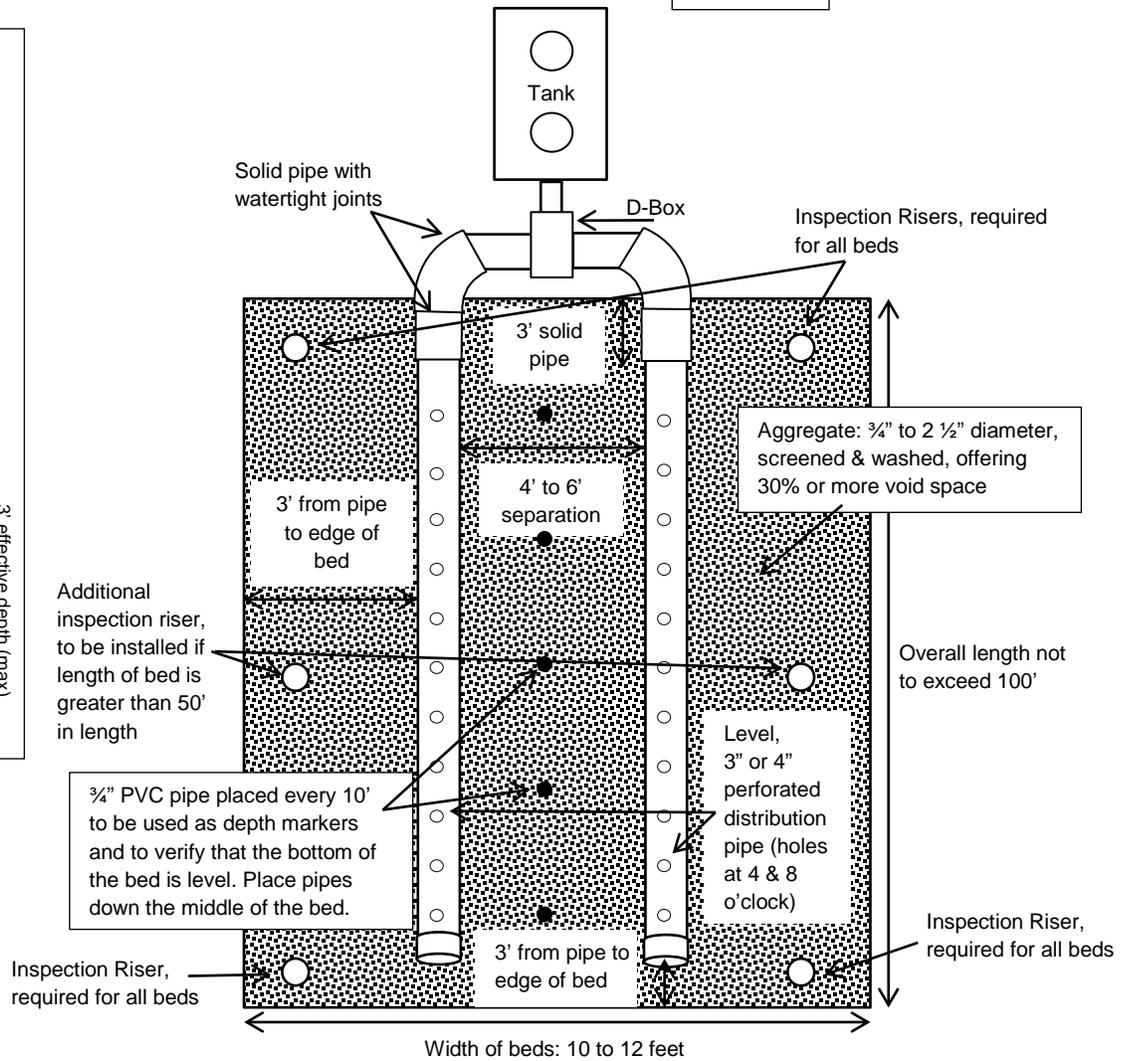

These diagrams are for example purposes only; they are not to TRUE scale.

NOTE: TANK PLUMBING SHOULD **NOT** BE CONNECTED TO HOUSE PRIOR TO INSPECTION